

WARNING:

Before putting tool in service,
take to your immediate
supervisor.



RENFROE



Model FRD Clamp

Application, Operation and Maintenance Manual

OM 211-FRD



Operators Manual

This Operator's Manual covers the Application, Operation and Maintenance of this RENFROE product. Operator's Manuals for other current RENFROE products are available upon request. Direct Requests to J.C. Renfroe & Sons, Inc., Jacksonville, Florida 32201.

**J.C. RENFROE & SONS,
INCORPORATED**

of Jacksonville, Florida, has been an international leader in the manufacture and marketing of Lifting Clamps for over fifty years. **RENFROE** products are manufactured in Jacksonville, Florida. A worldwide network of stocking distributors provides a readily available source of supply and service.

**J.C. RENFROE & SONS,
INCORPORATED**

Jacksonville, Florida 32201
Telephone: 904/356-4181
Toll Free: 1-800-874-8454
Fax: 904/354-7865
www.jcrenfroe.com

THIS PUBLICATION SUPERSEDES ALL PREVIOUSLY PUBLISHED AND/OR DISTRIBUTED INFORMATION BY MANUFACTURER AND/OR ITS DISTRIBUTORS WITH RESPECT TO APPLICABLE RENFROE PRODUCTS AND SUBJECT MATTER DESCRIBED OR CONTAINED HEREIN.

WARNING:

Prior to selection, operation and/or maintenance of RENFROE products, read and understand the information provided in this manual.

The understanding and use of the Definitions are important in determining the limitations and proper application of RENFROE products.

Failure to review and utilize recommended applications, operation and maintenance instructions may result in serious injury to operator and others.


NOTICE OF EXCLUSION OF WARRANTY

RENFROE HAS HEREIN SET FORTH IN CONSPICUOUS LANGUAGE AN EXCLUSION OF ANY WARRANTY EITHER EXPRESSED OR IMPLIED, WHICH IS NOT SPECIFICALLY AND PARTICULARLY CONTAINED HEREIN. PLEASE REFER TO THAT STATEMENT FOR REPRESENTATIONS AND WARRANTIES OF PRODUCTS MANUFACTURED BY J.C. RENFROE & SONS, INC.

OPERATING AIDS

(DO'S AND DON'TS)

1. **DO** read and understand the operator's manual before using clamp.
2. **DO** consult Operators Manual or RENFROE when in doubt.
3. **DON'T** lift over workmen. **DON'T** lift over safety areas or personnel.
4. **DO** attend a factory training class for establishing proper use of Renfro Products.
5. **DO** Lock clamp closed when clamps are fitted with a lock. **DON'T** lift with lock in open or "lock open" position.
6. **DON'T** use a connection that may release the clamp.
7. **DON'T** attach clamp directly to crane hook. **DO** use a flexible connection between crane hook and clamp shackle. **DON'T** use heavy flexible connection.
8. **DO** use correct clamp for job. **DON'T** use large capacity clamps to lift light loads.
9. **DO** use an adequate number of clamps to balance load. **DON'T** lift loads that are not balanced.
10. **DO** use clamps within their rated capacity. **DON'T** overload clamps.
11. **DO** inspect clamp before each lift, follow inspection and maintenance instructions outlined in the manual and use RENFROE replacement parts to assure proper operation of the clamp.
12. **DON'T** use clamp that has been overloaded. **DO** refer to pre-lift inspection in Operator's Manual.
13. **DON'T** side load with a straight shackle clamp.
14. **DON'T** misuse. **DON'T** lift plate from bottom of plate stack.
15. **DON'T** rush. **DON'T** lift more than one plate at a time with a vertical clamp.
16. **DON'T** improvise. Always use correct clamp for the job. **DON'T** lift plate horizontally with a vertical lift only clamp.
17. **DON'T** alter clamp. **DON'T** grind, weld or modify the clamp in any manner.

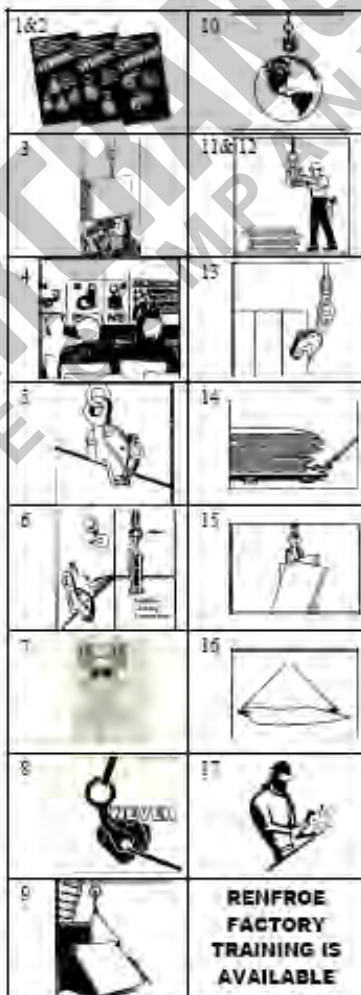

J.C. RENFROE & SONS, INC.
P.O. BOX 4279 / 1928 SPEARING STREET / JACKSONVILLE, FL. 32201

Phone: 904-358-4181
Fax: 904-354-7985
Internet: www.jcrenfro.com
E-Mail: sales@jcrenfro.com


OPERATING AIDS

(DO'S AND DON'TS)


1. DO read and understand the Operators Manual before using the clamp
2. DO Consult Operator's Manual or RENFROE when in doubt.
3. DON'T Lift over workmen DON'T lift over Safety Areas or personnel.
4. Do attend a factory training class for establishing proper use of Renfro Products.
5. DO Lock clamp closed before lifting load. DON'T lift with lock in open or "Lock Open" position.
6. DON'T Use a connection that may release the clamp.
7. DON'T attach clamp directly to crane hook. DO use a flexible connection between crane and clamp shackle. DON'T use heavy flexible connection.
8. DO use correct clamp for job. DON'T use large capacity clamps to lift light loads.
9. DO Use an adequate number of clamps to balance load. DON'T lift loads that are not balanced.
10. DO Use clamps within their rated capacity. DON'T overload clamps
11. DO Inspect clamp before each lift, follow inspection and maintenance instructions outlined in this manual and use RENFROE replacement parts to assure proper operation of the clamp
12. DON'T Use clamp that has been overloaded. DO refer to pre-lift inspection in Operators Manual
13. DON'T Side load with a straight shackle clamp. DON'T lift from side with vertical clamp
14. DON'T Misuse. DON'T lift plate from bottom of plate stack.
15. DON'T Rush. DON'T lift more than one plate at a time with a vertical clamp.
16. DON'T Improvise. Always use correct clamp for job. DON'T lift plate horizontally with a vertical lift only clamp.
17. DON'T Alter clamp. DON'T grind, weld or modify the clamp in any manner.

DEFINITIONS

VERTICAL LIFT: The lifting of a single plate or member in which the lifting force exerted by the rigging is directly above and in line with the lifting shackle as shown in the illustration below.

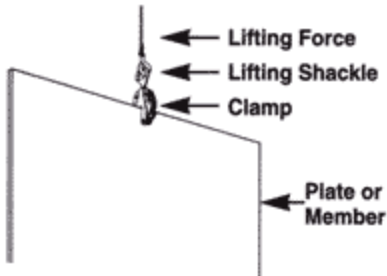


VERTICAL TURN/LIFT: A vertical turn/lift clamp is a vertical lifting clamp specifically intended to turn a single plate or member thru a ninety degree (90°) arc and back to vertical thru the same ninety degree (90°) arc or from horizontal to vertical to horizontal thru a one hundred and eighty degree (180°) arc. Refer to Application Section of specific Turn/Lift clamps for further detail. During the turning operation the edge of the plate opposite the edge to which the clamp is attached should always be in contact with a supporting surface such as a factory floor and the load on the clamp not exceed one half rated capacity of clamp—refer to illustrations shown below.

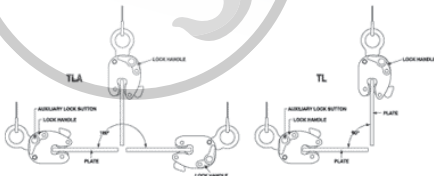

HORIZONTAL LIFT: Clamps (used in pairs or multiples) are attached to the side edges of a plate or bundle of plates positioned horizontally to the floor level. The rigging attached to clamps is generally multi-legged slings with the connecting point of the slings being approximately centered between the distance separating the clamps. Refer to illustrations shown below.

WARNING: The capacity of all horizontal clamps is based on a sling angle of sixty degrees (60°). See illustration below. Sling angles less than sixty degrees (60°) increase the load exerted on the clamps, Never exceed the rated capacity of a single clamp.

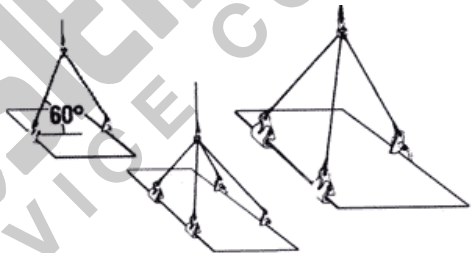

STEEL PLATES: Unless otherwise specified, lifting clamps are manufactured to handle hot-rolled steel plates whose Brinell Hardness does not exceed 300. **WARNING:** Do not lift plates with coatings or mill scale that prevent the gripping surfaces of the clamp from making positive contact with the base metal.

For applications not covered by the above information, secure written recommendations from RENFROE.

FINISHED AND POLISHED PLATES: Steel plates in this category have other than hot-rolled surfaces such as stainless steel, etc., are generally handled using non-marring clamps incorporating smooth gripping surfaces.

WARNING: For applications using clamps with serrated gripping sur-

faces on finished or polished plates, secure written recommendations from RENFROE.

STRUCTURAL MEMBERS—FABRICATED SECTIONS: Unless otherwise specified, clamps described as capable of handling structural members and fabricated sections are limited to hot-rolled steel whose Brinell Hardness does not exceed 300. **WARNING: For applications not covered by the above information, secure written recommendations from RENFROE.**

RATED CAPACITY: The rated capacity of a RENFROE product is based on the product being in “new or as new” condition and represents the maximum load the product is to be subjected to when utilized in the manner described in this manual. Wear, misuse, abuse and other factors relating to usage may reduce the rated capacity. Shock loading and the factors listed must be taken into consideration when selecting a RENFROE product for a given application.

PLATE THICKNESS: The minimum and maximum plate thickness a clamp specified for handling plates is capable of lifting. **WARNING: Never use a clamp for lifting a plate where the plate thickness is less than or greater than the minimum and maximum stenciled on the clamp.**

JAW OPENING: The minimum and maximum thickness of a member of clamp specified as having a JAW OPENING is capable of handling. **WARNING: Never use a clamp on a member whose thickness is less than or greater than the range of jaw**

opening stenciled on the clamp.

OPERATING TEMPERATURES: Unless specified under the Application Section of the individual model, the approved operating temperature of RENFROE clamps is from zero degrees Fahrenheit (-18 Celsius) to a maximum of 200 degrees Fahrenheit (+93 degrees Celsius). The minimum and maximum temperatures apply to both ambient and the material being handled by the clamp. **WARNING: Secure written authorization from RENFROE before using clamps in temperatures other than shown.**

“HOT LIFTS”: The Model R and S clamps are available in modifications that are capable of making lifts where the temperatures of the member being lifted exceeds 200 degrees Fahrenheit (+93 degrees Celsius). Depending on conditions a lift may exceed 1000 degrees Fahrenheit (538 degrees Celsius). The exact application and temperatures of the plates to be handled are critical in selecting the proper model. **WARNING: Secure written instructions from RENFROE for all hot lift applications.**

LOCKING CLAMPS: Locking clamps are divided into the categories listed below. With the exception of the “Locking Wedge” and “Locking Screw” type the purpose of the locks are to facilitate the attaching and removing of the clamp from the member being handled.

“LOCK CLOSED” - an over center spring loaded mechanism in which the spring exerts a force on the gripping cam when the lock handle is moved to the “Lock Closed” position. When the

handle is moved to unlocked position the force exerted by the spring is relaxed and the gripping cam may be retracted by pushing the lifting shackle into body of clamp. Refer to the Operation Section of specific models of "Lock Closed" clamps for additional details. Typical "Lock Closed" clamps are Models DG, FR and M.

"LOCK OPEN ONLY" - normally used on "Hot Lift" clamps and consists of a manually operated "Lock Stop Pin" that is inserted when gripping cam of clamp is retracted and removed when clamp is positioned on the plate. Tag line may be used to permit operator to remove pin from a greater distance from clamp. Refer to the Operation Section of specific model of "Lock Open Only" clamps for additional details. Typical "Lock Open Only" clamp is the Model RO.

"LOCK OPEN-LOCK CLOSED" - an over-center spring loaded mechanism in which the spring exerts a force on the gripping cam when the lock handle is moved to the "Lock Closed" position. When the handle is moved to the "Lock Open" the gripping cam is maintained in the retracted position for ease in installing the clamp on a plate or member. The Model FRD contains individual "Lock Open" and "Lock Closed" mechanisms that must be operated separately. Refer to the Operation Section of specific models of the "Lock Open-Lock Closed" clamps for additional details. Typical "Lock Open-Lock Closed" clamps are Models FRD, R, S, SD, SEA, SX, TL, TLA and the J-Series.

"LOCKING WEDGE" - is a fluted steel wedge that is driven in place with a

hammer. The body of the wedge is positioned in a slot in the clamp body with the fluted edges contacting the member to which the clamp is being attached. Refer to Operation Section of specific models of the "Locking Wedge" clamps for additional details. Typical "Locking Wedge" clamps are Model A1, B1, B2 and PB.

"LOCKING SCREW" - "Lock Screw" clamps depend on manually adjusting a screw to hold the gripping surface in place for lifting and removing the clamp from member being lifted. Refer to Operation Section of a specific model of "Locking Screw" clamps for additional details. Typical "Locking Screw" clamps are Models AC, ACP, NM, PC, SCP and SCPA.

NON-LOCKING: "Non-Locking" clamps have no mechanisms to aid in attaching or removing clamp from member being lifted. It is necessary to have position of clamp maintained on the member being lifted until a properly applied force is exerted to the lifting shackle. Refer to Operation Section of specific models of the "Non-Locking" clamps for additional details. Typical "Non-Locking" clamps are Model AST, ASTL, BD, HR, HDR and WHSR.

WARNING: A pointing out and notice of danger. The purpose of a "WARNING" is to apprise the operator and all other affected persons of the existence of danger of which he should be but may not be aware and to enable the operator to protect himself and others where applicable against such danger. An attempt is made herein to warn against reasonable and reasonably foreseeable danger in the proper use and possible reasonable misuse of RENFROE products described in this manual.

DESIGNATED PERSON — A person selected by the employer or the employer's representative as being competent to perform those specific duties.

QUALIFIED PERSON — A person who, by possession of a recognized degree in an applicable field or certificate of professional standing, or who, by extensive knowledge, training, and experience, has successfully demonstrated the ability to solve problems relating to the subject matter at hand.



**HOOSIER CRANE
SERVICE COMPANY**

MODEL FRD VERTICAL LIFTING LOCKING




Application FRD

The model “FRD” is a vertical lifting clamp that incorporates two model “FR” clamps into one and is used where it is desirable to spread the gripping surfaces with two points of contact. Refer to illustrations shown below. The clamp contains two “Lock Closed” mechanisms which are connected by a chain and a manually operated “Lock Open” mechanism. Refer to Definition Pages for explanation of “Lock Open” “Lock Closed” clamp.

Refer to exploded view of clamp located at the end of the Maintenance Section for identification of component parts.

WARNING: Refer to the sections on operation and maintenance for the approved procedure in the operation and maintenance of this product.

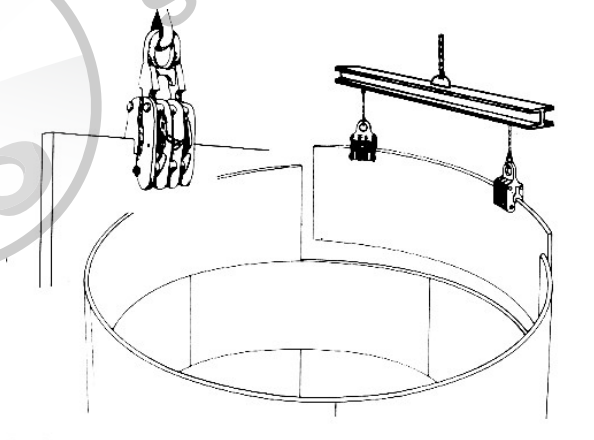

Operation FRD

Step 1.

Before using any RENFROE clamp, refer to the Application Section to confirm the operation to be undertaken is an appropriate application for this product.

Step 2.

Select appropriate capacity and plate thickness. The model designation, capacity and plate thickness are stenciled on each clamp.

WARNING: Never exceed rated capacity or use on plates that are not within the range of plate thickness stenciled on clamp. Lift only one plate on each lift.

Always use a clamp with maximum plate thickness and rated capacity near equal to the thickness and weight of the plate being lifted.

Step 3.

Inspect clamp before each lift.

WARNING: Do not use if in need of repair.

If in doubt, refer to Maintenance Section for detailed maintenance instructions and exploded view of the clamp for part identification.

- A. Check the clamp to be certain the Identification and warning tags are present and legible.
- B. Do not use the clamp if the tags are missing or illegible
- C. Inspect gripping surfaces for wear and defects. Gripping surfaces must be sharp and free of foreign matter.
- D. Swivel jaws should turn freely. Inspect swivel jaw mounting holes in body for elongation indicating overloading and wear.
- E. The lock springs must have a definite amount of tension when the lock is moved to the "Lock Closed" position without material in the clamp.
- F. Inspect condition of body for wear, damage and distortion, particularly in the area of jaw opening.
- G. Inspect lifting shackle and all pin holes for wear and damage.
- F. Inspect locking chain linkage for wear or damage. Both locks must unlock when chain is actuated.
- G. Remove any clamp from service if in need of repair.

Step 4.

The clamp is a component of the rigging used in lifting or transporting a plate. It is important to use safe and adequate rigging. The locks are used to hold the clamp in place until the gripping mechanisms are actuated by a force applied to the lifting shackle.

WARNING: Improper or excessively heavy rigging may interfere with the operation of the clamp and its ability to maintain a proper position on the plate. Never attach crane hook directly to the clamp—always use sling between crane hook and clamp.

Step 5.

Activate lock chain until both lock mechanisms move to the “Unlocked” position. Push downward on the lifting shackle until “Lock Open” lever engages. Refer to Illustration A.


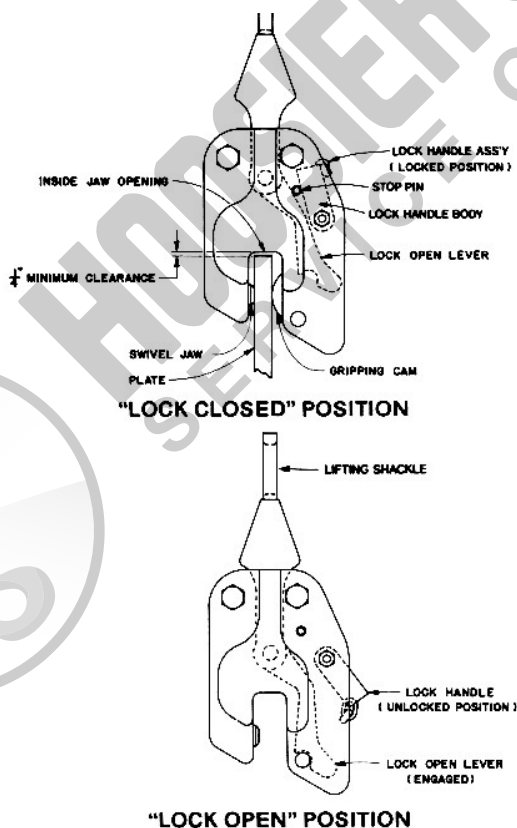


Illustration A

Step 6.

Install clamp on plate to be lifted. Do not allow inside of jaw opening to rest on edge of plate. Maintain 1/4" clearance. Refer to Illustration A, Step 5, and Photograph B.

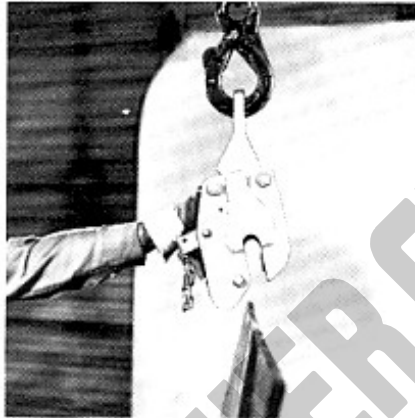


Photograph B

Position clamp so direction of force applied by the crane is in line with the lifting shackle. Refer to Photograph C and D.



Photograph C Sling directly above and in line with lifting shackle.

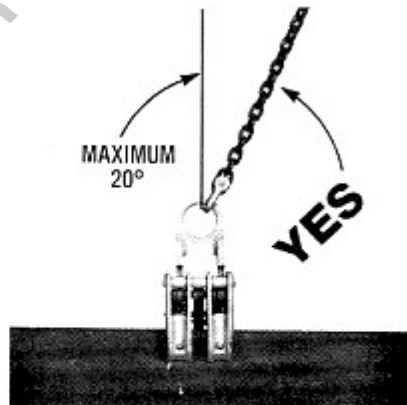

Photograph D Maximum allowable sideloading.

WARNING: Never exceed twenty degree side-loading.
Refer to Photograph E.



Photograph E Sling directly
in line with lifting shackle.

Step 7.

Release the “Lock Open” lever. Refer to Illustration A, Step 5, and Photograph F.



Photograph F

Step 8.

Move both lock handles to the “Lock Closed” position. Lock handle bodies must rest on stop pins. Springs now exert force on the gripping cams. Make certain both swivel jaws and gripping cams are fully in contact with the plate and not partially on and off the edge of the plate. Refer to Illustration A, Step 5, and Photograph G.

WARNING: Lift only when clamp is in the “Lock Closed” position.



Photograph G

Step 9.
Commence lift.

WARNING: The operator should position himself away from and fully clear of the member to be lifted. Do not commence lift until all personnel are clear of the area of the lift. Never stand under or near a member being lifted.

Refer to Photograph H.



Photograph H

Step 10.

To remove clamp—after plate is fully supported and at rest in a stable position, relax lifting force, actuate locking chain until both lock mechanisms are in an “Unlocked” position. Refer to Illustration A, Step 5 and Photograph J.



Photograph J



Photograph K

Push down on lifting shackle and engage “Lock Open” lever. Lift clamp from plate. Refer to Illustration A, Step 5 and Photograph K.

Step 11.

Inspect clamp. Remove from service if in need of repair.

WARNING: In the event the stenciling is worn and not legible or the tag containing the model, capacity or other pertinent information is missing—do not use clamp until it has been properly labeled.

Inspection kits are available at no charge upon request from the distributor or RENFROE.

Kit contains:



RENFROE clamps are constructed so the wearing parts may be replaced by installing individual parts or by using RENFROE Repair Kits containing all parts generally replaced due to normal wear.

Maintenance Program for Renfroe Clamps Manufactured from Steel

The severity of service to which the clamp is subjected in the work place determines the frequency and type of inspection procedure required for the clamp. The frequency and type of inspection is determined by the clamp owner. Renfroe acknowledges the ASME B30.20 safety standard which sets forth minimum inspection requirements for "Below-the-Hook" lifting devices and the Renfroe Recommended Inspection Schedule meets and/or exceeds the ASME inspection recommendations.

Before using a clamp operators should be trained by a qualified person to visually inspect a lifting clamp that will include but not be limited to the following:

Every lift Inspection:

A visual inspection by the operator before and after each lift made by the clamp.

- Check the clamp to be certain the Identification and warning tags are present and legible.
- Do not use the clamp if the tags are missing or illegible.
- Inspect gripping surfaces for wear and defects. Gripping surfaces must be sharp and free of foreign matter.
- Swivel jaws should turn freely. Inspect swivel jaw mounting holes in body for elongation indicating overloading and wear.
- The lock springs must have a definite amount of tension when the lock is moved to the "Lock Closed" position without material in the clamp.
- Inspect condition of body for wear, damage and distortion, particularly in the area of jaw opening.
- Inspect lifting shackle and all pin holes for wear and damage.
- Inspect locking chain linkage for wear or damage. Both locks must unlock when chain is actuated.
- Remove any clamp from service if in need of repair.

WARNING: Do not use the clamp if in need of repair.

If, during the every lift inspection, the operator believes the clamp exhibits excessively worn parts or is damaged, the clamp should be inspected by a qualified person who will make a determination as to its fitness to make a lift. At this time the condition of the clamp should be noted and recorded. After inspection by the qualified person it may be decided that a periodic inspection procedure is necessary.

Frequent Inspection:

A visual inspection (see every lift inspection) by an operator or other designated person timed according to the clamps service class.

- **Normal Service:** monthly
- **Heavy Service:** weekly to monthly
- **Severe Service:** daily to weekly.

If, during the frequent inspection, the operator believes the clamp exhibits excessively worn parts or is damaged the clamp should be inspected by a qualified person who will make a determination as to its fitness to make a lift. At this time the condition of the clamp should be noted and recorded. After inspection by the qualified person it may be decided that a periodic inspection procedure is necessary.

Periodic Inspection:

A recorded inspection by a qualified person as described in the Periodic Inspection Procedure below timed according to the clamps service class.

- **Normal Service:** annual
- **Heavy Service:** semi-annual
- **Severe Service:** quarterly.

If during any inspection a condition is found which leads to a periodic inspection then the next periodic inspection is due from the time the clamp is returned to service. See the table below.

Normal Service-One Year
Heavy Service-6 Months
Severe Service-3 Months

Warning: If any hazardous condition is found that may cause injury to the operator or other personnel then the clamp should be subjected to a Periodic Inspection by a Qualified Person.

Repair (replacement of worn parts)

During regular maintenance when replacing parts that are worn a record should be made of the parts replaced. After the replacement of worn parts clamps need not be load tested.

Repair (replacement of damaged parts)

During a repair in which parts are replaced due to damage a record should be made of the repair. At this time the clamp should be marked with the following information as per the ASME B30.20 requirements:

- **Name and address of the repairer**
- **Repairer's unit identification**
- **Clamp weight (if altered)**
- **Rated load (if altered)**
- **ASME BTH-1 Design Category (if altered)**
- **ASME BTH-1 Service Class (if altered)**



Model FRD Periodic Inspection Procedures

Step 1.

Verify the identity of the clamp by checking the I. D. plate on the clamp body. If the I. D. plate is missing or not legible an RFID chip (Radio Frequency Identification Device) is embedded in the clamp body or a clamp component. If the I. D. plate is missing and the RFID chip is unavailable call the Renfroe factory for instructions on returning the clamp for recertification.

Step 2.

Completely disassemble clamp.

Step 3.

Remove all dirt, grease and other matter that may inhibit proper inspection of the clamp body or clamp components.

Step 4. BODY

- A. Inspect welds for fractures. RENFROE recommends a dye penetrant or similar method of detecting indications on the clamp. If an indication is found it may be necessary to use a magnetic particle, ultrasonic or similar methods for determining damage to the clamp or components.
- B. Inspect shackle pin guide slots located inside of body. Guide slots must be smooth and free of indentations where shackle pin may seat. Refer to exploded view.
- C. Inspect all pin holes for wear and elongation.
- D. Inspect inside jaw opening for displaced metal and distortion.
- E. Inspect lock pivot holes for excessive wear.
- F. Inspect lock stop pin. This is a tension pin and must be in place.
- G. Inspect swivel jaw mounting holes for elongation and wear. Swivel jaw must turn freely. Remove clamp body from service when Swivel Jaw Mounting Hole Dimensions equal or exceed those listed below.

Rated Capacity Tons	Mounting Hole Dia. Inches	Mounting Hole Depth Inches
1	.905	.316
2	1.160	.426
4	1.290	.488
6	1.545	.520

WARNING: Replace clamps containing fractures, elongated holes, worn and elongated swivel jaw mounting holes, distorted jaw openings and clamp bodies with worn or rough shackle pin guide slots.

Step 5.

LIFTING SHACKLE FRD-1

- A. Inspect welds and body for fractures, wear and distortion.
 - B. Inspect lifting shackle eye for elongation and wear at point where eye engages sling attachment.
 - C. Inspect shackle pin holes for wear and elongation.
- An elongated shackle eye indicates overloading. Elongated shackle pin holes indicate wear and possible overloading. Bent shackles indicate excessive side-loading.

WARNING: Replace shackles that are bent, show excessive wear at eye, have elongated eye and shackle pin hole.

Step 6.

CAM ASSEMBLY FRD-2

- A. Inspect cams for chipped or worn teeth. Teeth must be sharp and free of foreign matter.
- B. Inspect cam straps for distortion and fractures.
- C. Inspect holes in cam straps for elongation and wear.

WARNING: Replace cam assemblies that have cams with worn or damaged teeth, contain fractures, and cams and cam straps with elongated pin holes.



Step 6.

SHACKLE PIN and CAM PIN FRD-3 and FRD-4

A. Inspect all pins for:

1. Distortion
2. Surface blemishes
3. Wear
4. Fractures

WARNING: Replace pins that are distorted, have surface scars, and worn or contain fractures.

Step 7.

SWIVELJAW FRD-5

- A. Inspect swivel jaws for fractures, damage and wear. Serrations must be sharp and free of foreign matter.
- B. Swivel jaw must turn freely in clamp. During assembly—insert lubricant in body recesses before installing swivel jaws. Recommended lubricant is powdered graphite or Molybdenum Disulfide grease. Tighten screw and lock nut, then reverse nut one turn to allow free rotation of the swivel jaw.

WARNING: Replace worn, dull or damaged swivel jaws.

Step 8.

LOCK SPRING FRD-6

- A. Inspect lock springs for distortion. Springs must have a definite amount of tension when moved to the “Lock Closed” position without material in the clamp. Lock handle bodies must rest on stop pins. Refer to Illustration L.

WARNING: Replace if damaged, distorted or lacking in tension.

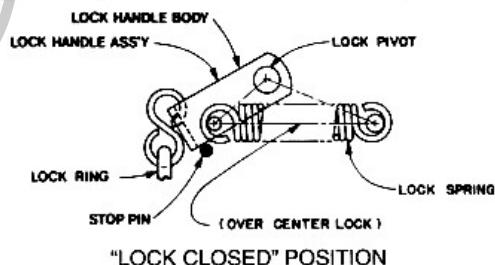


Illustration L

Step 9.

LOCK ASSEMBLY FRD-7

- A. Inspect both lock assembly bodies for damage and wear. Lock assemblies should pivot freely without binding. When assembling lock bodies to clamp, tighten pivot screw lock nut, then loosen until lock bodies pivot freely.
- B. Inspect chain connecting the two lock bodies. The chain must be in place and free of damage.

WARNING: Do not alter lock assembly. Use only component parts supplied to RENFROE. Replace lock if worn or damaged.

Step 10.

LOCK OPEN LEVER FRD-8

- A. Inspect lever for damage and wear. The lock open lever pivots on the shackle pin and engages the cam pin when the clamp is in the "Lock Open" position. Make certain the lock open lever properly engages the cam pin.

WARNING: Replace damaged lock lever and lock lever that does not properly engage cam pin. Refer to exploded view.

Step 11.

BODY BOLT and BODY SPACER SLEEVE FRD-30

- A. Inspect body bolts and spacer sleeves for wear at position where sleeve contacts shackle. Replace sleeve if worn.
- B. Inspect body bolts.
- C. Make certain body bolt nuts are tight. When replacing body bolts, tighten nuts, center-punch bolt and nuts at thread joint to lock nuts in place.

WARNING: Replace body bolts, nuts and sleeve if worn or damaged.

Step 12.

ASSEMBLY

After reassembly, check operation of clamp. All parts should move freely without binding. Refer to exploded view for proper location of component parts.


WARNING: All retaining pins and fasteners must be in place.

GENERAL

RENFROE products may be returned to the factory for inspection and refurbishment in accordance with an established fee schedule.

Use only RENFROE replacement parts to insure maximum efficiency and safety factor originally built into the product. Refer to RENFROE catalog for instructions on ordering replacement parts.

WARNING: Do not weld, grind or modify the clamp body or component parts in any manner. In the event the stenciling is worn and not legible or the tag containing the model, capacity or other pertinent information is missing—do not use clamp until it has been properly labeled.

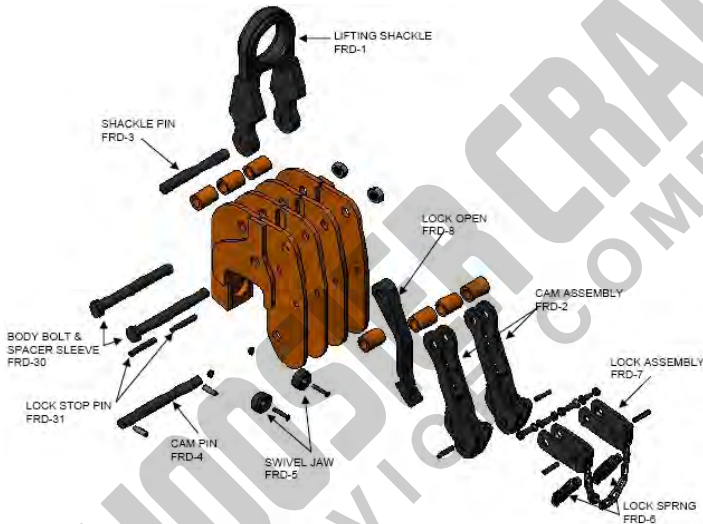

EXCLUSION OF WARRANTY

THERE EXISTS NO WARRANTIES NEITHER EXPRESSED NOR IMPLIED WHICH EXTEND BEYOND THE DESCRIPTIONS OR STATEMENTS CONTAINED IN THE FACE OR ANY PART HEREOF.



J.C. RENFROE & SONS, INC.

P.O. Box 4279 • 1926 Spearing Street • Jacksonville, Florida 32206
Phone: U.S.A. Toll Free (800) 874-8454 (in Florida 904/356-4181)
Facsimile: 904/354-7865 • Internet: www.jcrenfroe.com