



HOOSIER CRANE
SERVICE COMPANY

☎ 574-523-2945

☎ 800-509-6131

🌐 www.hoosiercrane.com

✉ sales@hoosiercrane.com

Enrange Flex 6 Antenna

Installing an External Antenna

Before hooking up the external antenna you need to move the jumper from internal to external (see attached diagram).

You will need to take the cover off the receiver. Once the cover is off, you will see the antenna board. The board will have four sets of pins with one black jumper. The jumper will need to move from internal to external. Finish by installing the receiver cover and external antenna.

